


1. Open the printer's front cover.

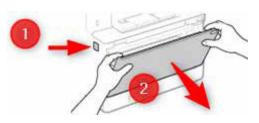

2. Remove the used cartridge from its slot and take it out of the device.

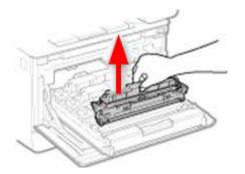


- 3. Take the new cartridge out of its packaging. Shake the cartridge gently several times.
- 4. Remove the cartridge cover or protective sealing tape.

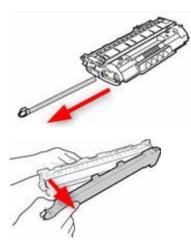

Be careful not to touch the drum surface located at the bottom of the printing cartridge.

5. Insert the new cartridge into the printer, ensure it is properly seated, and close the printer cover.

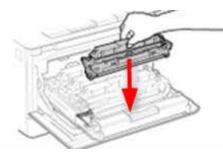

Usage Guidelines:

- Do not touch or rotate the photosensitive drum, as this may cause printing errors (e.g., white lines).
- Do not store or use the cartridge in a humid environment.
- Ensure the cartridge is dry before inserting it into the printer.
- Do not eat, drink, or smoke while handling the product.
- Do not dispose of or pour the toner into sewage systems, surface water, or groundwater.

Safety Precautions:

- Contact with the toner powder inside the cartridge may cause irritation, swelling, or redness.
- Avoid contact with eyes or clothing. In case of skin contact, wash thoroughly with soap and water.
- In case of eye contact, rinse with cool running water until symptoms subside.
- If toner spills from the cartridge, clean it using a dry, clean cloth or a dustproof vacuum cleaner. Wear protective goggles and a safety mask while doing so. Perform this task in a dry, wellventilated area.
- Keep the product out of children's reach. Do not disassemble the toner container.
- Do not store the cartridge at extremely high or low temperatures.
- Do not expose the cartridge to direct sunlight.
- Do not store cartridges near oxidizing agents or explosive materials.
- Dispose of the used cartridge only at designated recycling points or return it to the distributor/manufacturer (THI Sp. z o.o. Sp. k.).



THI Sp. z o.o., Sp ul. Nowe Sady 2 94-102 Łódź biuro@thi.pl